



Split Screen Divider Installation







What You Will Need:

Scuff pads (supplied)

Acetone

Primer (supplied)

Gloves

Goggles

Cleaning cloth

Foam brush (supplied)

Roller (supplied)

VERY IMPORTANT:

You must use acetone only (NO SUBSTITUTES) to clean center canopy surface.

Follow acetone and primer manufacturer's safety instructions regarding personal protective gear.

Work in a well ventilated area.

Installation Overview:

INSTALL THE CANOPY CHANNELS (x2)*:

1. Scuff the installation area
2. Clean the installation area with acetone
3. Apply the primer to the area
4. Remove the adhesive backing
5. Apply channels to the canopy
6. Apply pressure with the roller

INSTALL THE DIVIDER:

7. Remove the protective paper
8. Slide the divider into the channels

INSTALL THE D-RINGS (x5):

9. Clean the installation area with acetone
10. Apply the primer to the area
11. Remove the adhesive backing
12. Apply the D-ring to the installation area

FINISH THE INSTALLATION:

13. Fasten cords to D-rings (x5)

* After installation let set at least overnight



SPLIT SCREEN DIVIDER INSTALLATION



Install the Canopy Channels

Install the Canopy Channels:

1.
Scuff the installation area with Scotch Brite 7747



Install the Canopy Channels:

2.
Clean the installation area with acetone and cloth



Follow the acetone manufacturer's safety instructions regarding personal protective gear. Work in a well ventilated area.

Install the Canopy Channels:

3. Apply primer to the installation area with brush

Let set for a minimum of 5 minutes



Follow the primer manufacturer's safety instructions regarding personal protective gear. Work in a well ventilated area.

Install the Canopy Channels:

4.
**Remove adhesive
backing from the
channels (x2)**




Install the Canopy Channels:

5.1 Apply channel #1 to the canopy



Install the Canopy Channels:

6.1
Apply pressure
with the roller

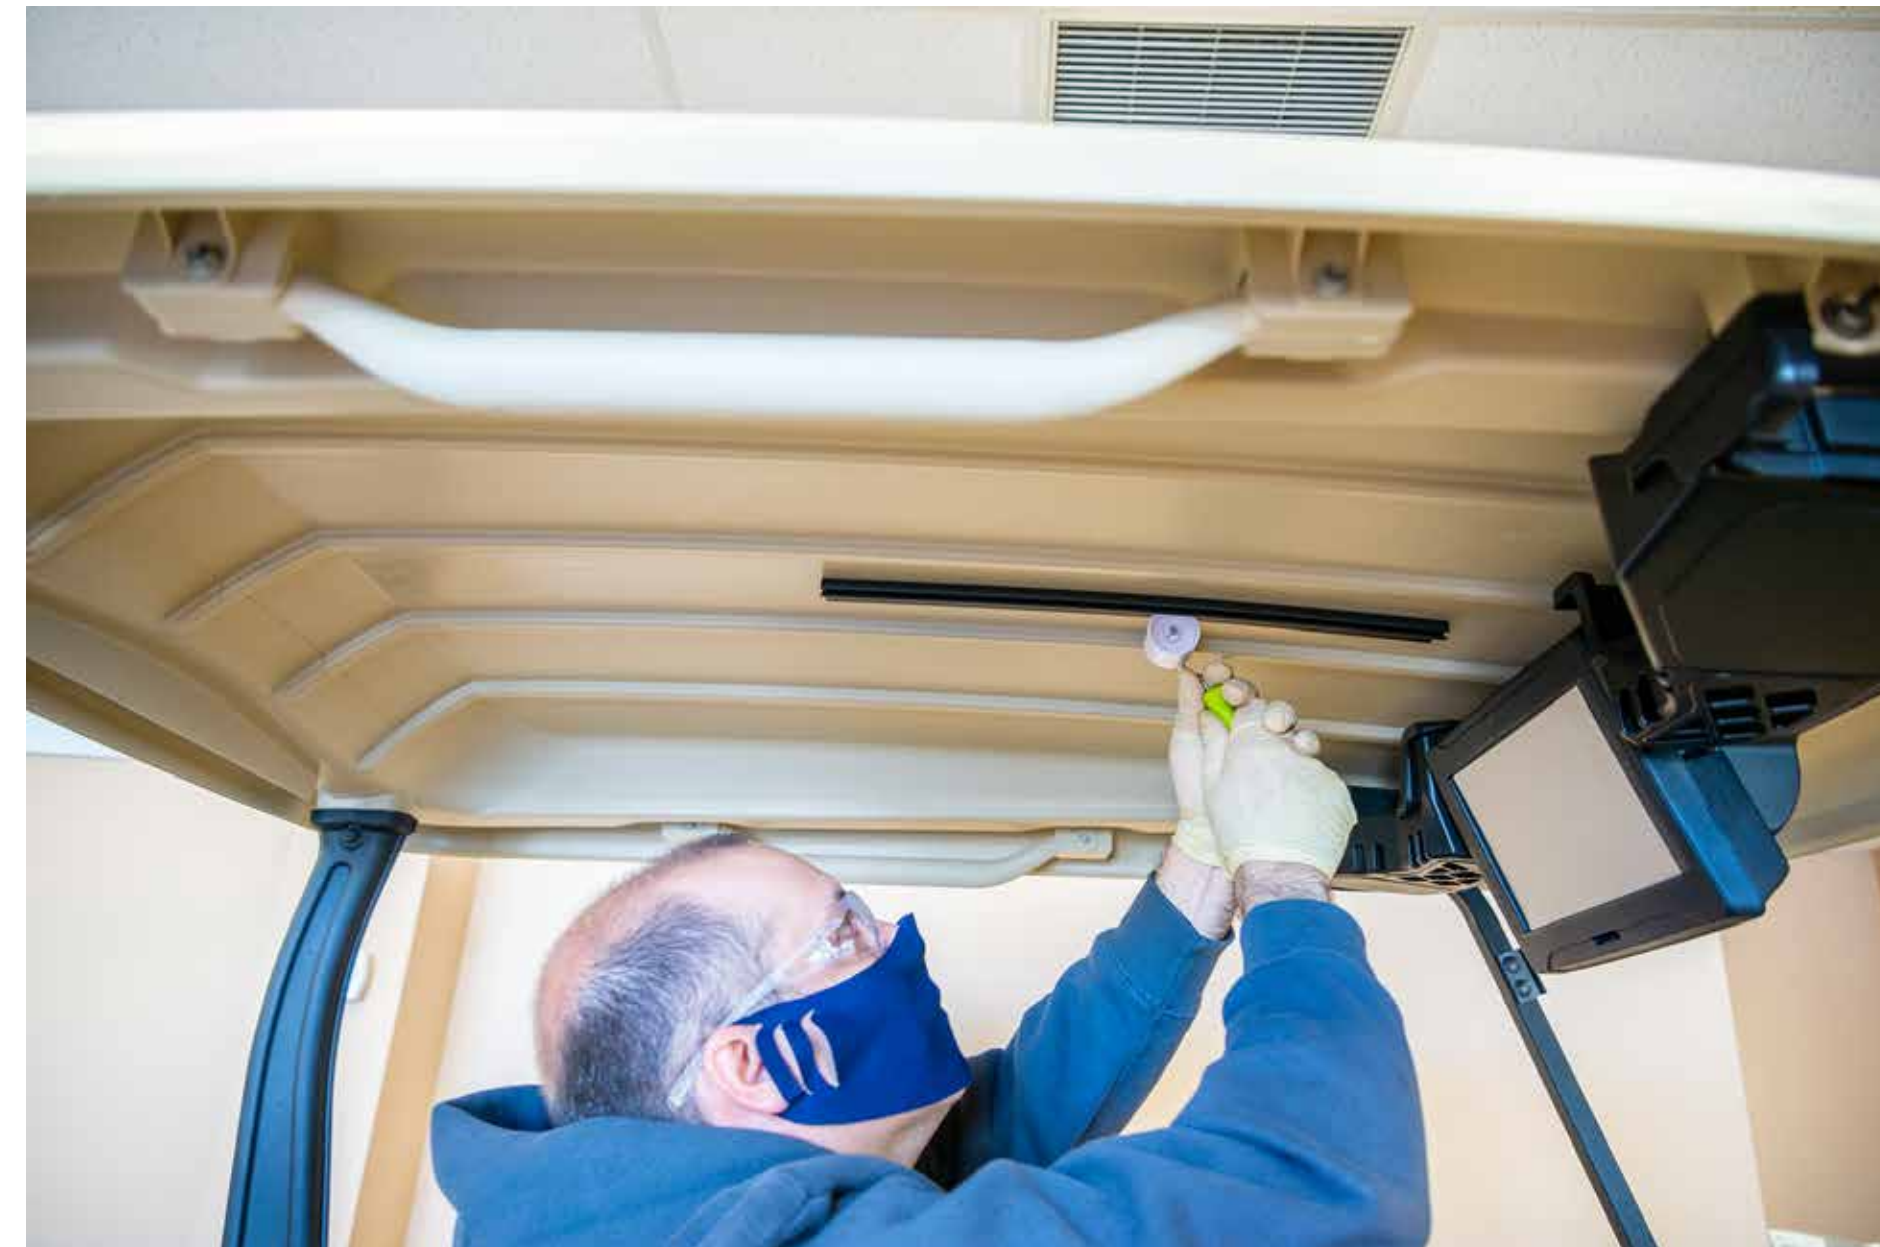

Install the Canopy Channels:

5.2
Apply channel #2
to the canopy



Install the Canopy Channels:

6.2 Apply pressure with the roller

Let set at a minimum overnight; the manufacturer suggests 24 hours





SPLIT SCREEN DIVIDER INSTALLATION



Install the Divider

Install the Divider:

7.
Remove protec-
tive paper from
the divider



Install the Divider:

8.
**Slide the divider
into the channels**





SPLIT SCREEN DIVIDER INSTALLATION



Install D-Ring #1

Install D-Ring #1:

9.1
Clean under the front of the canopy with acetone and cloth



Follow the acetone manufacturer's safety instructions regarding personal protective gear. Work in a well ventilated area.

Install D-Ring #1:

10.1
**Apply primer to
the installation
area with brush**

Let set for a minimum of 5 minutes



Follow the primer manufacturer's safety instructions regarding personal protective gear. Work in a well ventilated area.

Install D-Ring #1:

11.1
**Remove adhesive
backing from the
D-ring**



Install D-Ring #1:

12.1
Apply D-ring
under the front of
the canopy

Let set for a minimum of 15 minutes






SPLIT SCREEN DIVIDER INSTALLATION



Install D-Ring #2

Install D-Ring #2:

9.2
**Clean the top of
front body panel
with acetone and
cloth**

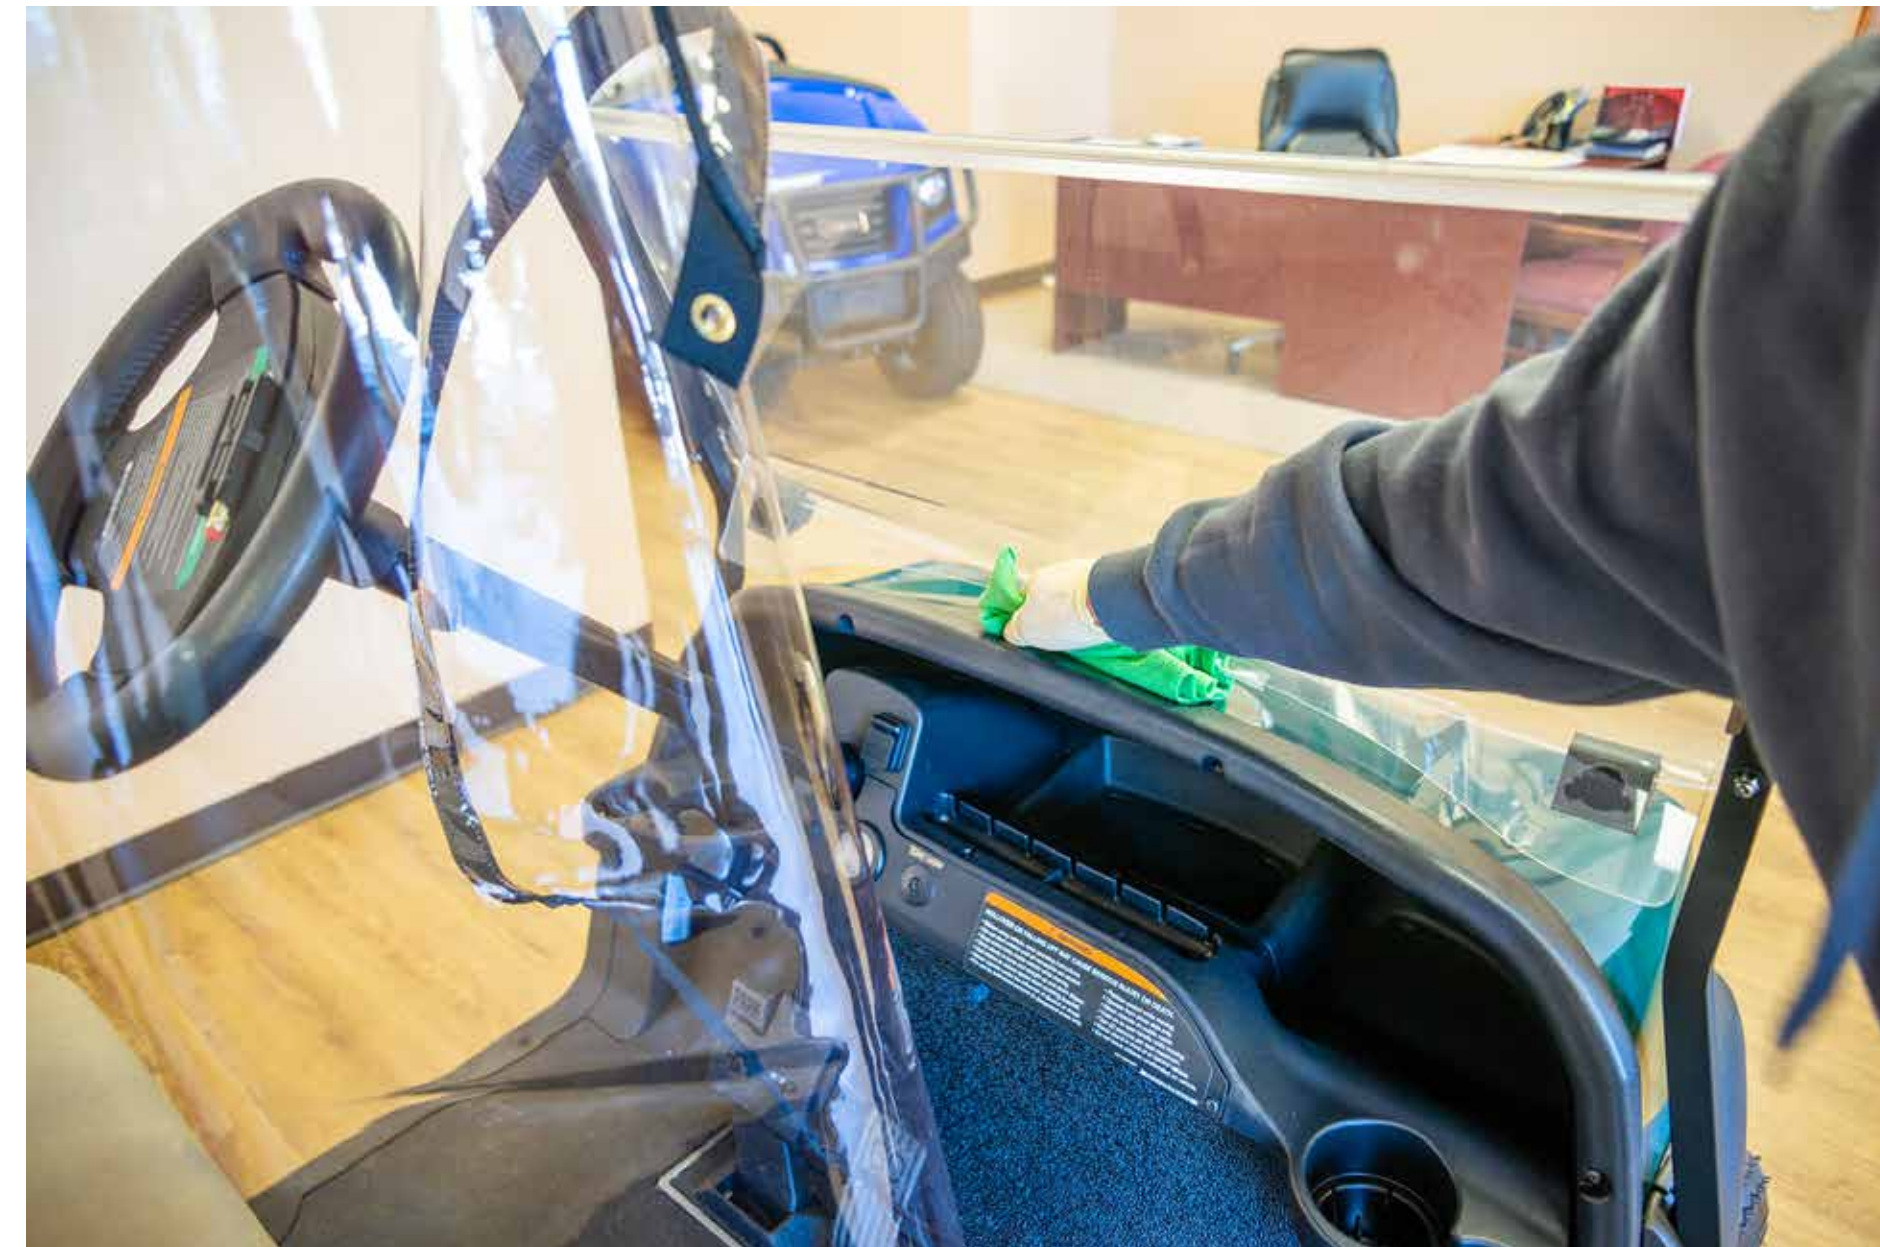

Follow the acetone manufacturer's safety instructions regarding personal protective gear. Work in a well ventilated area.

Install D-Ring #2:

10.2
**Apply primer to
the installation
area with brush**

Let set for a minimum of 5 minutes



Follow the primer manufacturer's safety instructions regarding personal protective gear. Work in a well ventilated area.

Install D-Ring #2:

11.2
Remove adhesive backing from the D-ring



Install D-Ring #2:

12.2
Apply D-ring to
the top of front
body panel

Let set for a minimum of 15 minutes






SPLIT SCREEN DIVIDER INSTALLATION



Install D-Ring #3

Install D-Ring #3:

9.3
Clean the bottom
of front console
with acetone and
cloth

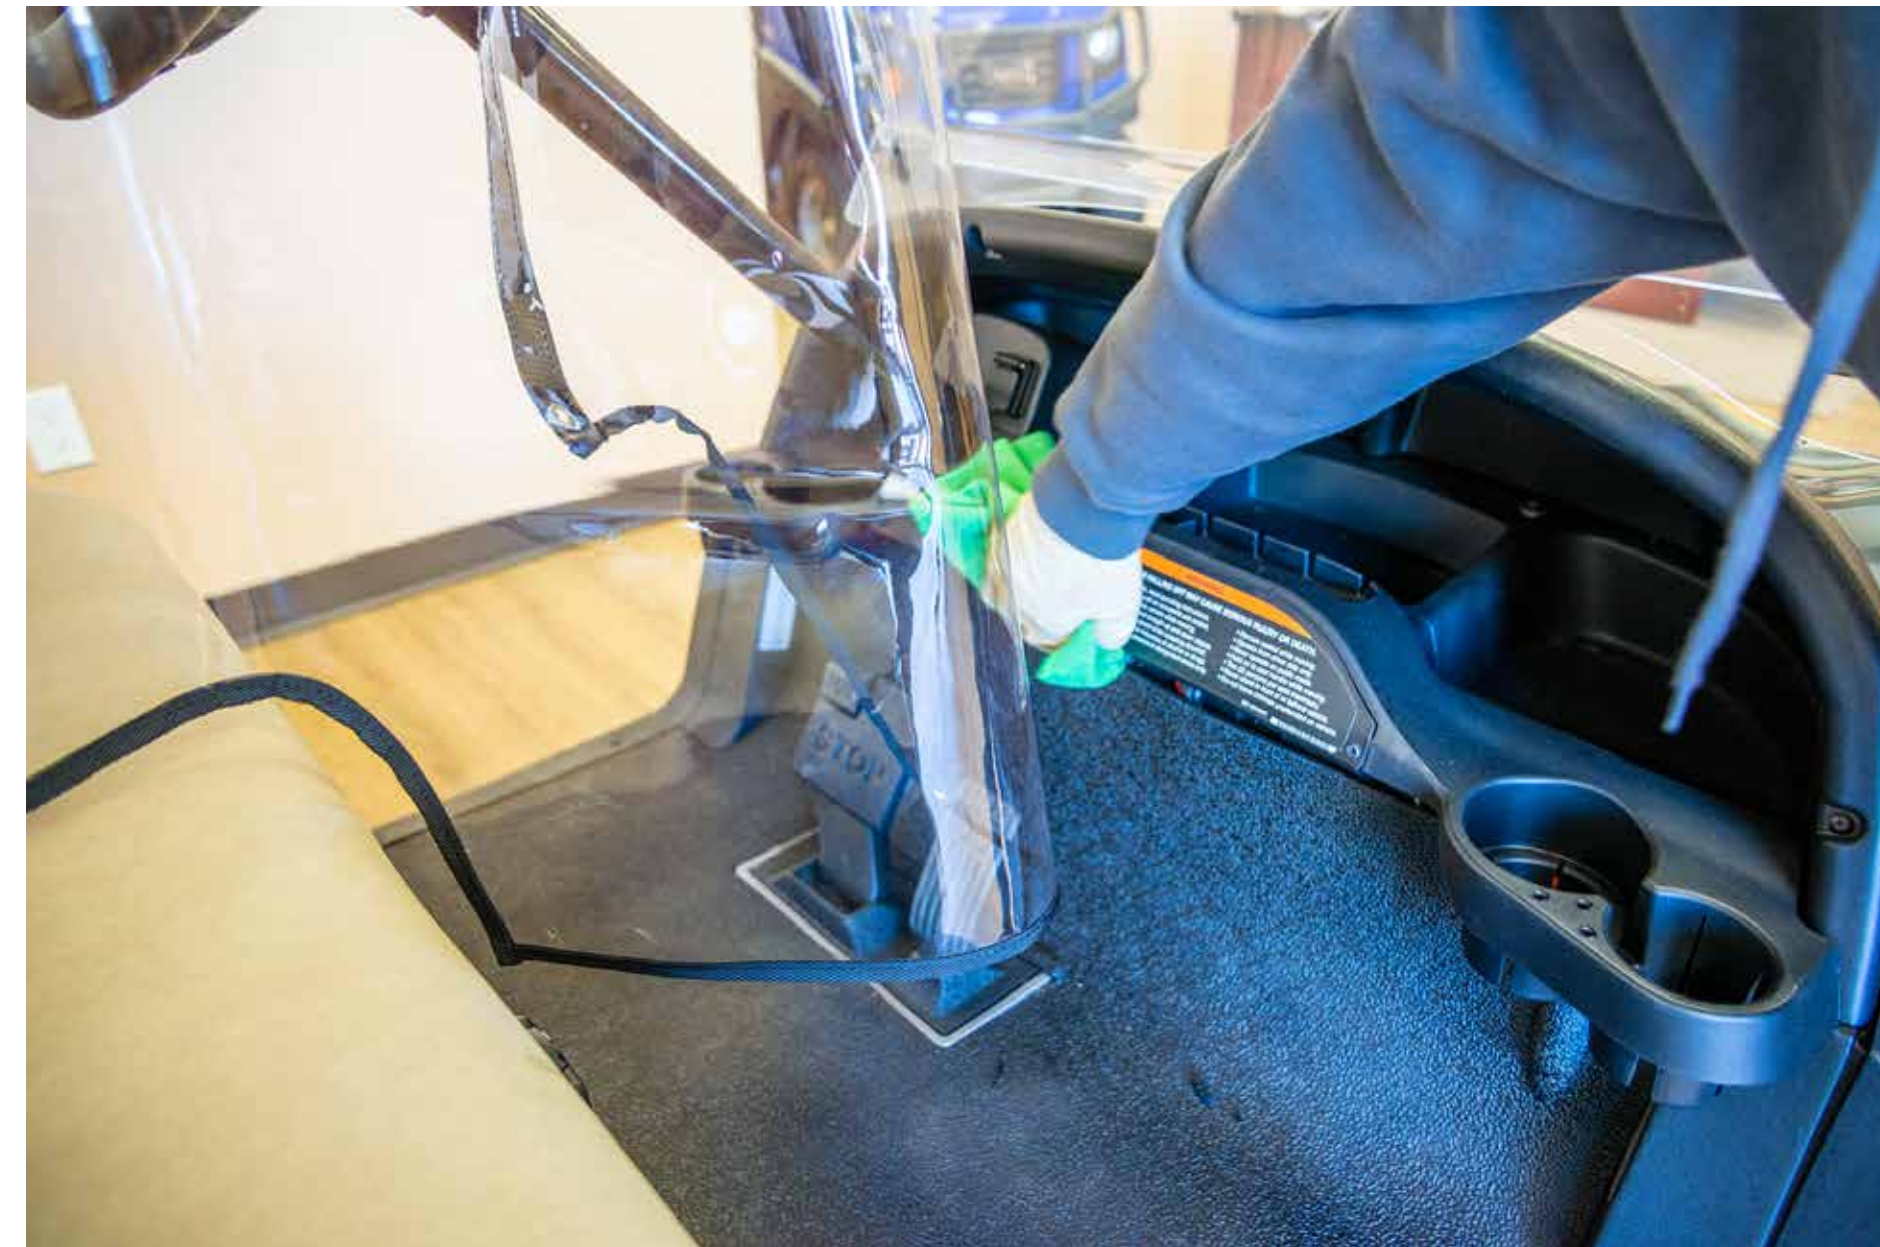


Follow the acetone manufacturer's safety instructions regarding personal protective gear. Work in a well ventilated area.

Install D-Ring #3:

10.3
**Apply primer to
the installation
area with brush**

Let set for a minimum of 5 minutes

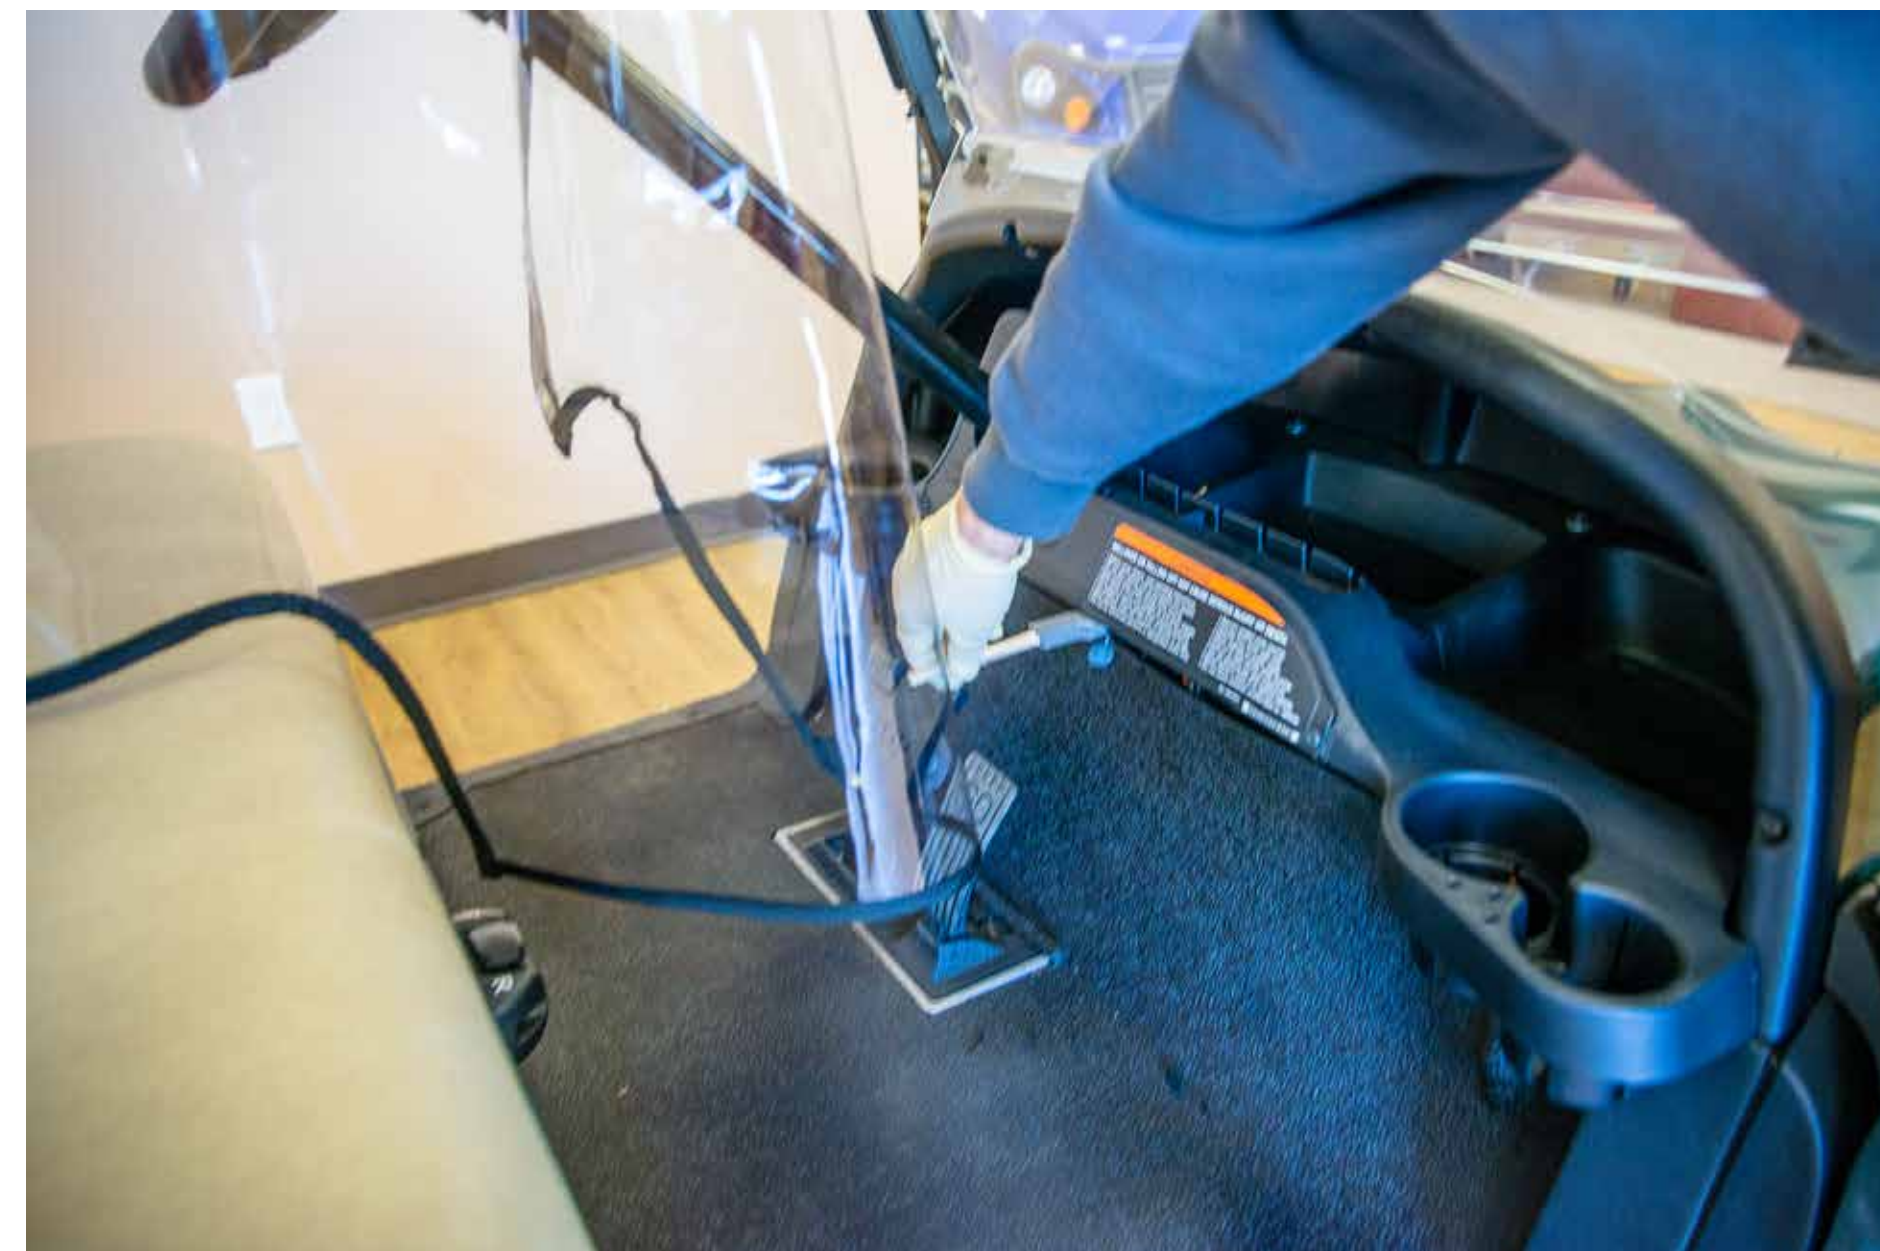

Follow the primer manufacturer's safety instructions regarding personal protective gear. Work in a well ventilated area.

Install D-Ring #3:

11.3
**Remove adhesive
backing from the
D-ring**



Install D-Ring #3:

12.3
Apply D-ring to
the bottom of
front console

Let set for a minimum of 15 minutes





SPLIT SCREEN DIVIDER INSTALLATION



Install D-Ring #4

Install D-Ring #4:

9.4
Clean the panel
under seat back
with acetone and
cloth



Follow the acetone manufacturer's safety instructions regarding personal protective gear. Work in a well ventilated area.

Install D-Ring #4:

10.4
Apply primer to
the installation
area with brush

Let set for a minimum of 5 minutes



Follow the primer manufacturer's safety instructions regarding personal protective gear. Work in a well ventilated area.

Install D-Ring #4:

11.4
Remove adhesive backing from the D-ring



Install D-Ring #4:

12.4
Apply D-ring to
the panel under
seat back

Let set for a minimum of 15 minutes





SPLIT SCREEN DIVIDER INSTALLATION



Install D-Ring #5

Install D-Ring #5:

9.5
Clean the seat back with acetone and cloth



Follow the acetone manufacturer's safety instructions regarding personal protective gear. Work in a well ventilated area.

Install D-Ring #5:

10.5
**Apply primer to
the installation
area with brush**

Let set for a minimum of 5 minutes



Follow the primer manufacturer's safety instructions regarding personal protective gear. Work in a well ventilated area.

Install D-Ring #5:

11.5
Remove adhesive backing from the D-ring



Install D-Ring #5:

12.5
**Apply D-ring to
the seat back**

Let set for a minimum of 15 minutes





SPLIT SCREEN DIVIDER INSTALLATION



Finish the Installation

Finish the Installation:

13.1
**Fasten the mini
bungee cord to
D-ring #1**



Finish the Installation:

13.2
Fasten the mini bungee cord to D-ring #2




Finish the Installation:

13.3
**Fasten the mini
bungee cord to
D-ring #3**



Finish the Installation:

13.4
**Fasten the mini
bungee cord to
D-ring #4**

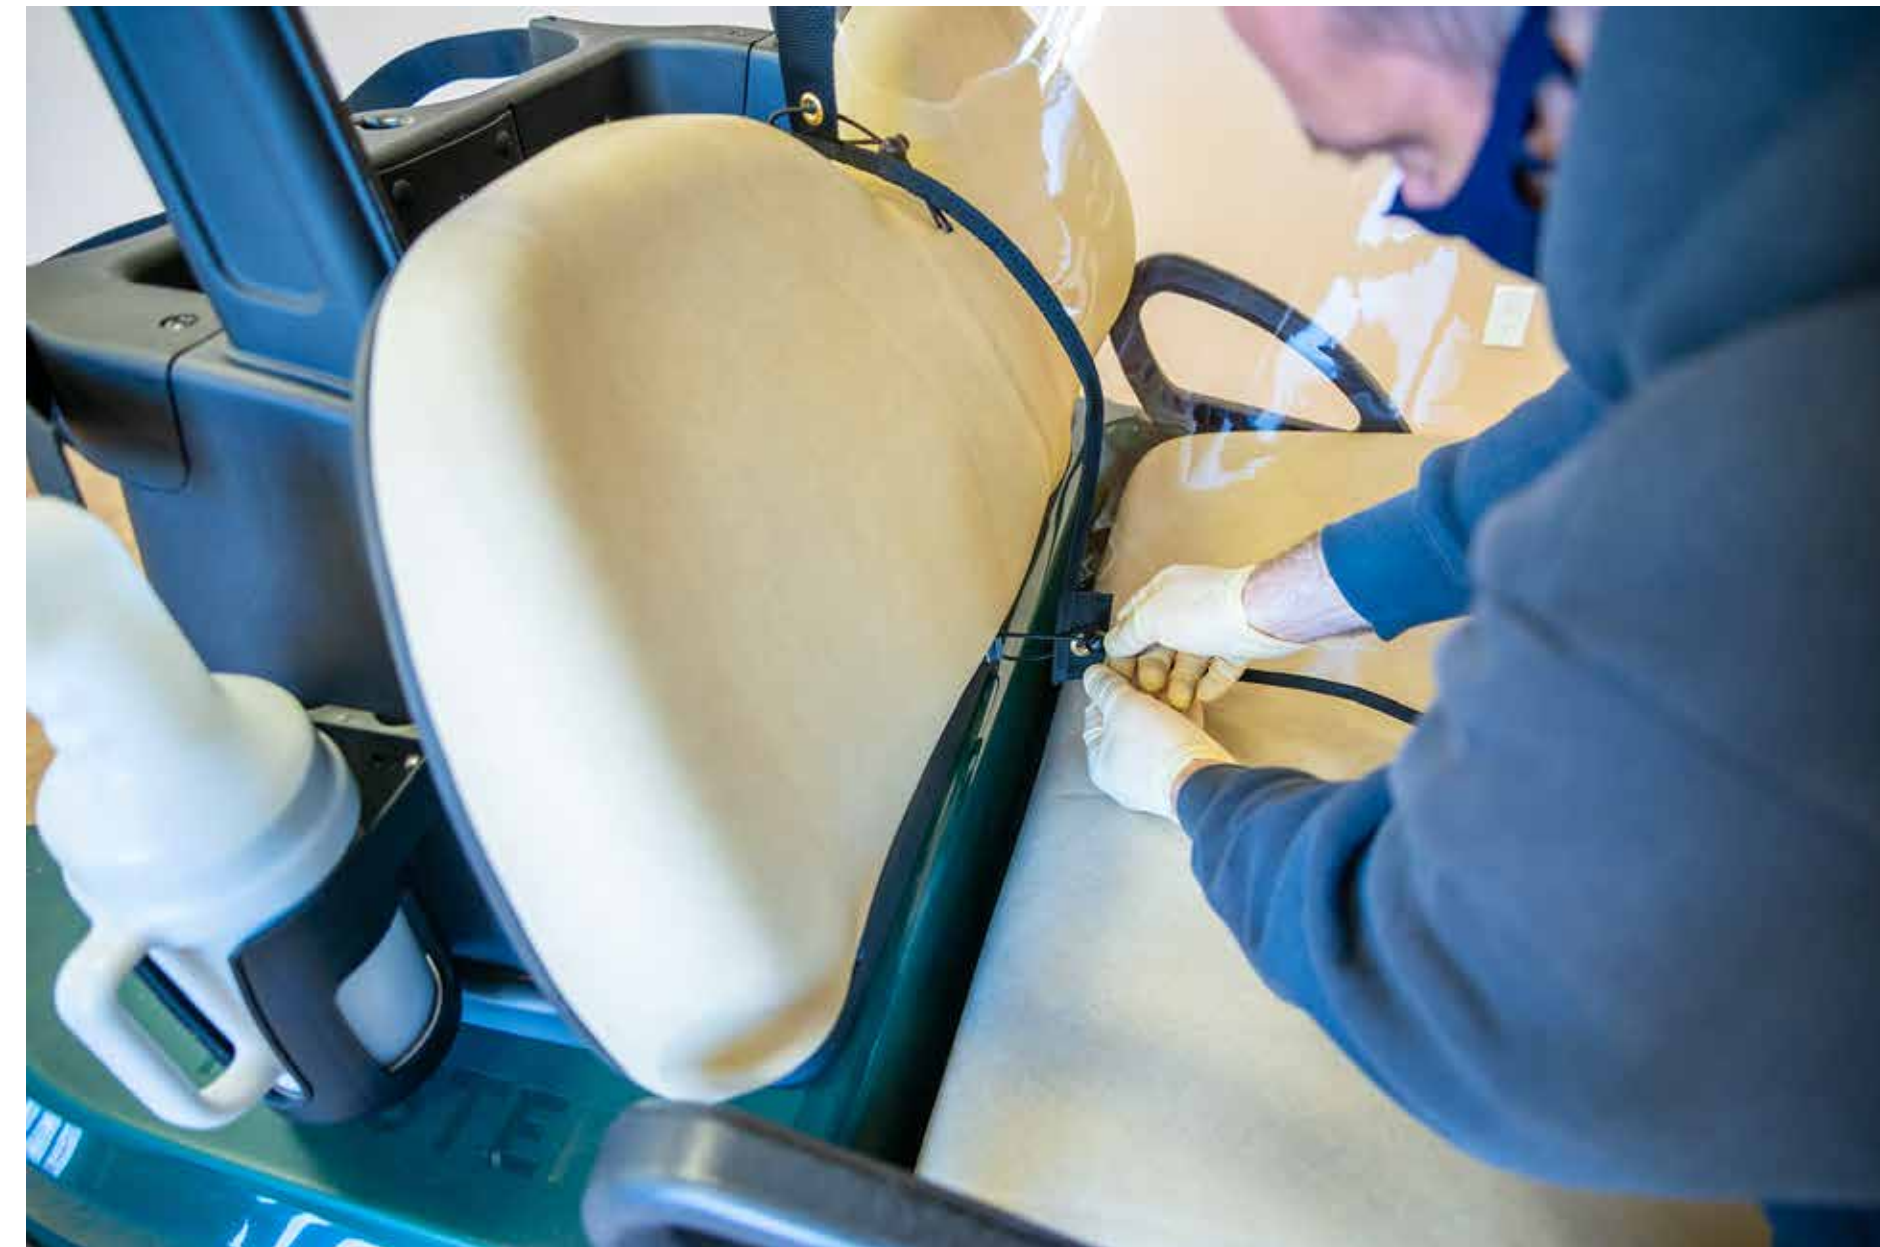

Finish the Installation:

13.5
Fasten the mini
bungee cord to
D-ring #5





Cleaning/Disinfecting:

We recommend using a professional vinyl cleaner with no alcohol.

Follow the initial step with a soap and water solution as you would normally clean the golf cart.

Note: The vinyl cannot be cleaned with an alcohol based disinfectant.

Do not store vinyl when wet.



SPLIT SCREEN DIVIDER INSTALLATION



Warranty:

We will guarantee workmanship and material for 1 year (assuming installation and cleaning procedures are followed).

If you have any questions do not hesitate to contact us.



SPLIT SCREEN DIVIDER INSTALLATION



STAY SAFE AND ENJOY!



800 467 2844
Info@ClubPro.com
ClubPro.com

AUGUSTA, GA | DEER PARK, NY | LOUISVILLE, KY | SANTIAGO, D.R.

Produced by:
RomeoCo.com
EdgeMediaDigital.com