

## IRON MAID INSTALLATION INSTRUCTIONS

### YAMAHA DRIVE 2

#### Required Tools

Drill  
 ¼" Drill bit  
 T-20 Torx bit  
 T-30 Torx bit  
 Ratchet / Torque Wrench  
 M-10 Combination Wrench

#### Vehicle Preparation

Park vehicle on flat surface.  
 Turn the key to the OFF position and remove the key from the switch.  
 Chock wheels to keep vehicle from rolling.

#### Installation Instructions

**Step 1:** Remove bagwell from car.

**Step 2:** Assemble cleaner to bracket with 4 screws provided, torque to 15 inch-pounds with T-20 Torx bit.


**Step 3:** Measure 7 5/8" up from the base of the bagwell and draw a horizontal line. Drill a ¼" hole at the intersection of the horizontal line and the contour line as shown in the photo to the right.

**Step 4:** Install bracket with first bolt, torque to 35 inch-pounds using T-30 Torx bit, twist bracket until top, right hole is aligned with contour line.

**Step 5:** Using the bracket as a guide, drill (2) 1/4" holes.

**Step 6:** Install second and third mounting bolt, torque to 35 inch-pounds.

**Step 7:** Reinstall bagwell.

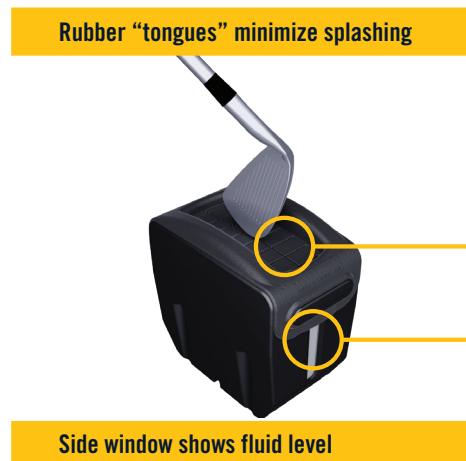

Step 2



Step 3




Step 4



Step 5



Step 6

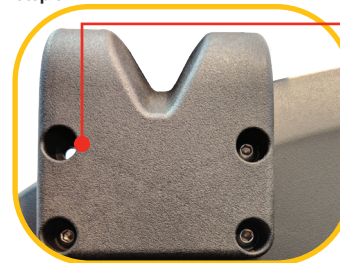

This position not used for driver's side mount

For passenger side mounting, the top right mounting hole is not used

Please contact Club Pro Manufacturing (CPM) for questions pertaining to these instructions or any repair maintenance or warranty claims. CPM provides a 2 year limited warranty covering manufacturing defects. Internal brushes will wear over time, please contact your local Yamaha distributor or Yamaha dealer to purchase replacement brush cartridges.

