

IRON MAID INSTALLATION INSTRUCTIONS

Club Car Onward

Step 1: Assemble cleaner to bracket with 4 screws provided, torque to 15 inch-pounds.

Step 2: Cut template out and use a hole punch to make a hole at the marked position.

Step 3: Tape template in place, drill $\frac{1}{4}$ " hole.

Step 4: Remove template.

Step 5: Install bracket with one M6 bolt, nut and washer, rotate toward front of car as far as possible.

Step 6: Using bracket as template, drill two forward holes.

Step 7: Install M6 fasteners in two forward holes, Torque nuts to 35 inch-pounds.

Note: Rear upper bolt position is not used

Step 1



Step 6A



Step 2 & 3



Step 6B




Rubber "tongues" minimize splashing



Side window shows fluid level

Mounting template

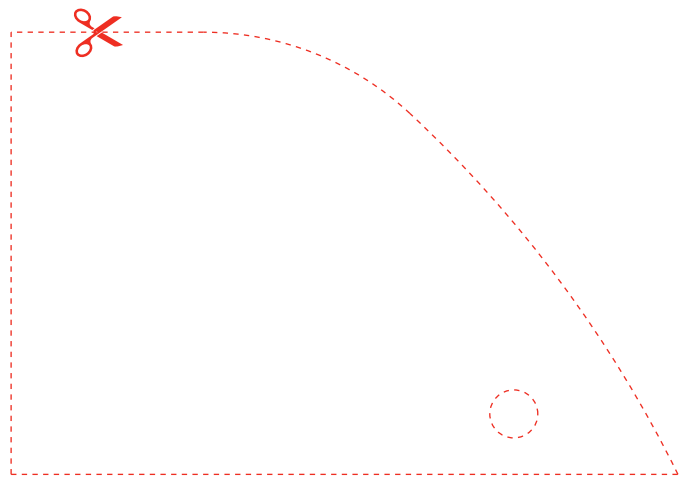

www.clubpro.com

Please call us with any questions pertaining to these instructions or any repair maintenance of the product
1-800-467-2844

