


CLUBPRO CABANA™ INSTALLATION ON CLUB CAR® PRECEDENT



1. Remove the two T40-Torx bolts from bag support.
2. Place cabana over bag support bracket.

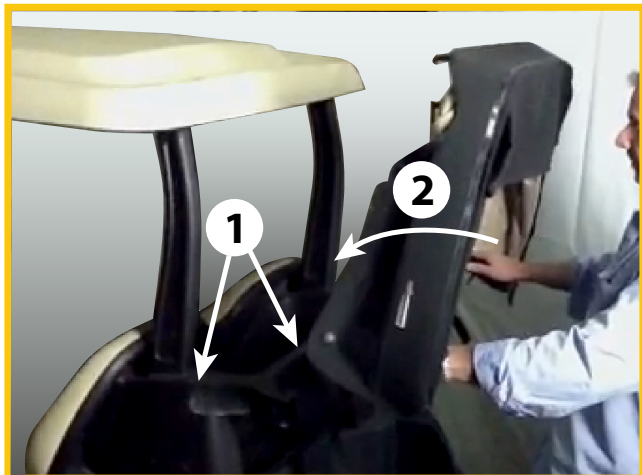

3. Replace the two T40-Torx bolts through cabana lower mounts and tighten to 8 Nm (72 in-lb).




4. Locate the two dimples in left roof support.
5. Drill 4mm (5/32") diameter holes at dimples.
(Repeat steps 4 and 5 on right side)



6. Position cabana side flap along left roof support.
7. Snap side flap push rivets into drilled holes.
(Repeat steps 6 and 7 on right side)



8. Open cabana cover to allow access to cabana upper mount bracket.

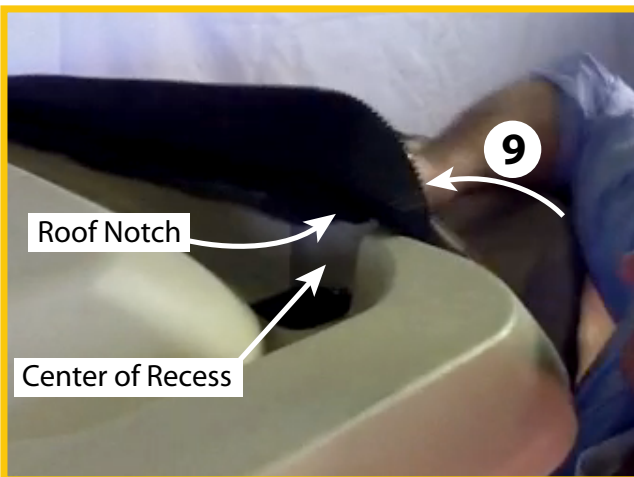

9. Align bracket with roof notch at center of recess and press firmly to snap in place (2 places).