


**YAMAHA DRIVE 3-SIDED ENCLOSURE INSTALLATION**



**INSTALLATION INSTRUCTIONS**



Install provided plastic extrusions onto the front roof struts from the inside of the cart. The protruding ribbed flange is positioned on the outside of the strut facing the rear of the cart. Two pieces of the 11 inch long extrusions get installed on each side of the cart above and below the windshield hinge. Align the holes in the plastics with the windshield bolts and press onto the struts.

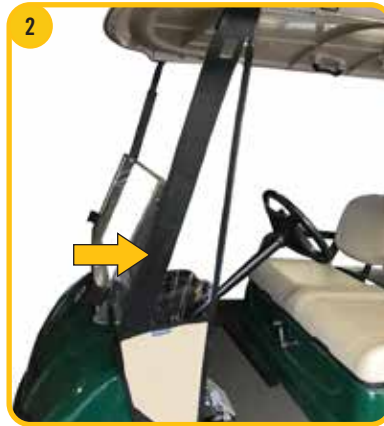

Install the front fabric panel onto the previously installed plastic extrusion by pressing the rubber extrusion onto the ribbed flange. Wrap the fabric straps around the windshield struts and secure with Velcro. Press rubber extrusion onto the front wheel lip of carts body.



Install the cover over the top of the cart. Connect to the front panels with the zippers and secure to the bottom of the cart with the jam cleat bungee hooks.



The rear window is secured to the cover with two snaps along the upper edge of the window. The sides of the window are zippered onto the cover. If the rear window is installed with the Cabana Bag Cover, it is placed inside of the roof struts and then secured to the top with the snaps and zippers as stated previously. **The 3-Sided installation is complete.**



[www.clubpro.com](http://www.clubpro.com)

Please call us with any questions pertaining to these instructions, repair maintenance of this product at 1-800-467-2844

